


The Driveline Trainer demonstrates the various setups of a driveline.

Operate the driveline in-phase or out-of-phase. Setup with variable and extreme angles.


Take measurements and use the level gauges to observe angles.

See or hear the sprocket speed differences as you make changes.

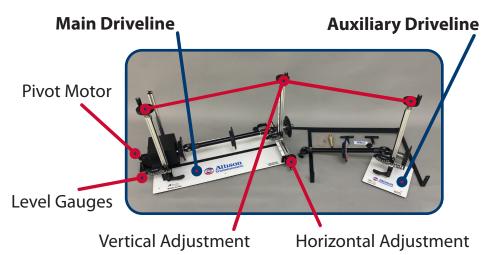



**Variable Angles** 

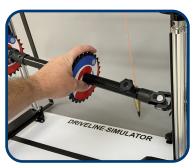

**Safe Operation** 



**Extreme Angles** 





